



NOTE: TAP FOR AIR AND VACUUM VALVE ASSEMBLY MUST BE INSTALLED AT HIGHEST POINT OF WATER MAIN. EXACT LOCATION OF ASSEMBLY TO BE DETERMINED BY DISTRICT.

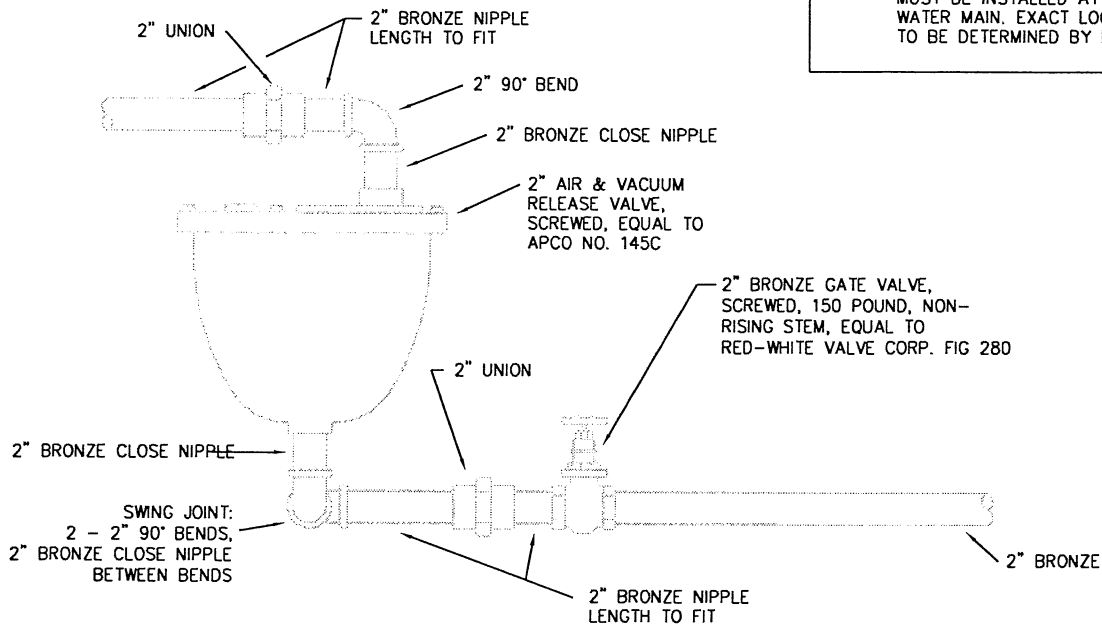

### VALVE ASSEMBLY DETAIL

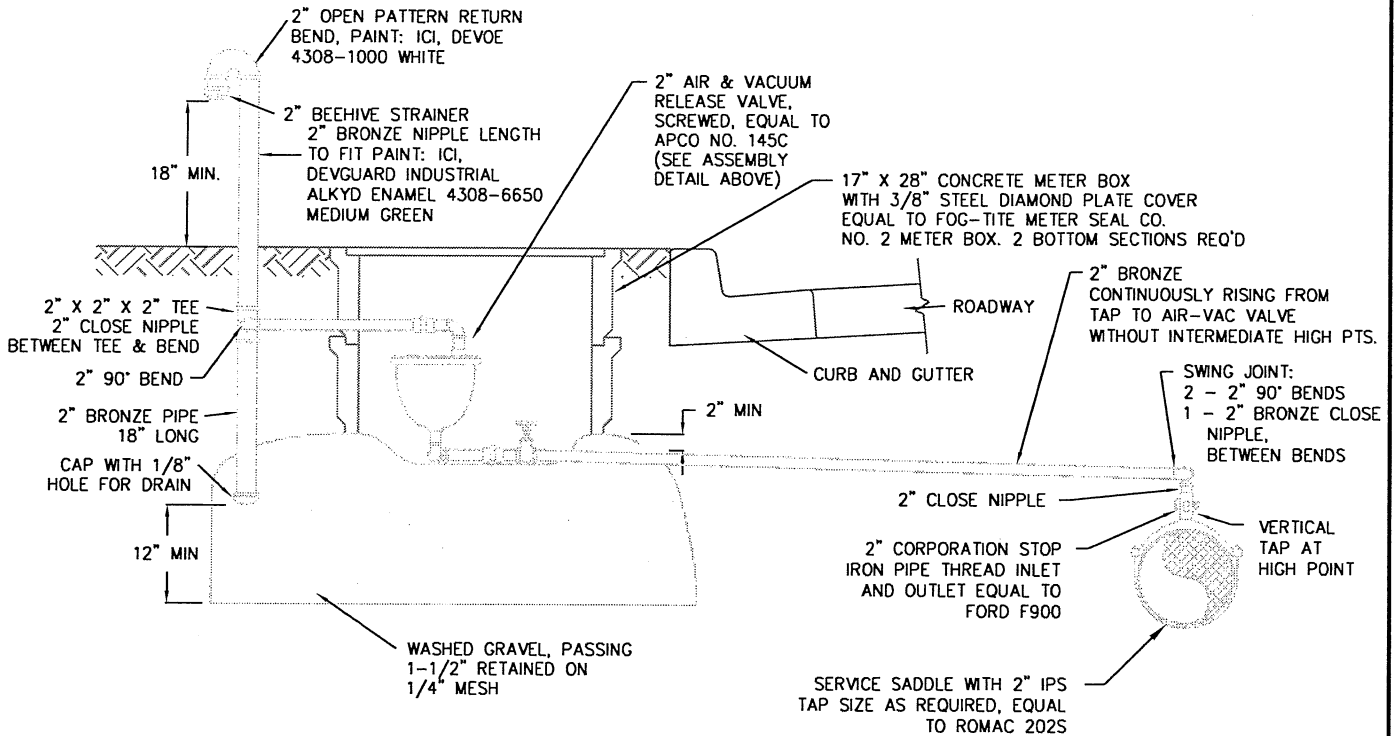

### 2" AIR AND VACUUM VALVE ASSEMBLY

## WATER STANDARD DETAIL

SNOQUALMIE PASS  
UTILITY DISTRICT

FILE	SCALE	DATE
SPUDTW4	NTS	7/22/04